



Display range

	Temperature setpoint
	Time (error code when an alarm is pending)
	Fan steps:
	1-stage plants: Off = no display, On = 6 bars
	2-stage plants: Off = no display, Stage 1 = 3 bars, Stage 2 = 6 bars
	3-stage plants: Off = no display, Stage 1 = 2 bars, Stage 2 = 4 bars, Stage 3 = 6 bars
	Automatic: Fan steps are selected automatically
	Weekday: 1 = Monday, 2 = Tuesday, 3 = Wednesday, ...
	Plant OFF
	Automatic: Plant switched by time program or building management system

	Plant ON in economy mode (reduced temperature setpoint)
	Plant ON in comfort mode
	Cooling ON
	Heating ON
	Plant ON: Party mode
	Alarm
	Heat recovery ON

Switching the plant (only with switching authorisation)

If is displayed at the top left, the plant is off. Press **ON/OFF** to switch the plant on.
The plant operating mode can then be switched (see **Switching the operating mode**).

Switching the operating mode (only with switching authorisation)

1. Make sure that the plant is switched on (see **Switching the plant**).
2. Press **MODE** to switch in a cycle between: Comfort , Economy and Automatic .

In Automatic, the time program or building management system decides on the operating mode.

Party mode

1. Press **PARTY** to start the party mode.
The symbol is displayed and, instead of the time, the remaining run time of **P1:00** (= 1 hour and 59 minutes) is displayed.
Press **PARTY** again to prematurely end the party mode.
2. Press **PLUS** to increase the remaining run time by 1 hour.
Press **MINUS** to decrease the remaining run time by 1 hour.
3. Press **FAN** to switch in a cycle between: Stage 1, Stage 2, Stage 3 and Automatic .

Setting the fan steps (only with switching authorisation)

Press **FAN** to switch in a cycle between: Stage 1, Stage 2, Stage 3 and Automatic .

Alarm display and acknowledgement

1. If is displayed, an alarm is pending. Most alarms display an error code in addition to the symbol. This appears on the display instead of the time (e.g. A:81). See the operating manual for a description of the error codes.
2. Keep **OK** pressed for one second to start an acknowledgement attempt.

Setting the temperature setpoint (not possible in party mode)

Press **PLUS** or **MINUS** to increase or decrease the setpoint by 0.5 °C.

Important information!

1. The switching authorisation of the room control panel depends on the setting in the controller (see operating manual).
2. The possible setting range of the temperature setpoint depends on the setting in the control (see operating manual).
3. Flashing symbols in the display area indicate that the room control panel has been overridden by the controller.
4. The number of TSP steps and the availability of the economy mode depend on the configuration of the plant (see operating manual).
5. In economy mode, the plant is operated at a reduced temperature setpoint. See the operating manual for further information.

Setting the time/date

Use **PROG** to switch to the time and date setting.
Press **PLUS** or **MINUS** to set the individual numbers and confirm with **OK**.